


Returning Micro-Gap[®] Valves for Regrinding

When returning Micro-Gap[®] valves for regrinding, please be sure to include the base valve with the rest of the valves.

The base valve is at the very bottom of the stack and is easily identified by the black O-ring on the outside diameter. This valve has a slight press-fit onto the inlet flange and can be removed by prying under the valve in the grooves provided (see sketch).

This base valve wears along with the rest of the valves and, if not reground with its respective stack, can cause undue wear to the other valves in the stack.

Valves to be reground should be returned to:

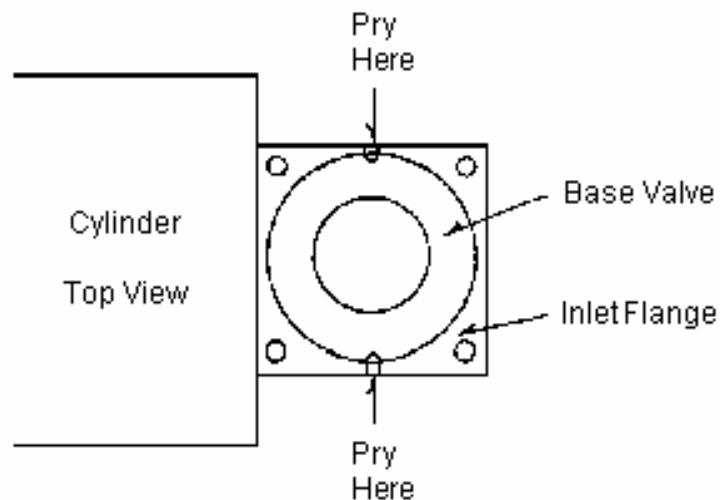

APV, An SPX Brand
Phone: 1-888-278-4321
Email: answers.us@apv.com

For more information about our worldwide locations, approvals, certifications, and local representatives, please visit www.apv.com.

SPX reserves the right to incorporate our latest design and material changes without notice or obligation. Design features, materials of construction and dimensional data, as described in this bulletin, are provided for your information only and should not be relied upon unless confirmed in writing. Certified drawings are available upon request.

Issued: 02/2009 3136-01-08-2008-US

Copyright © 2008 SPX Corporation